

Joyful Encore 4MH847WD06



| 4MH847WD06 | |
|--------------------|-----------------------|
| Name | Joyful Encore |
| Movement | Magic Motion – Encore |
| Case | Wood (Oak) |
| Number of Melodies | 18 |
| Swarovski Crystal | Yes |
| Night Shutoff | Yes |
| Volume Control | Yes |
| On/OFF Switch | Yes |
| LED Lights | Yes |
| Low Battery LED | No |
| Batteries | 4xD |
| Case Pack | 2 |
| UPC Code | 0-09136-84706-0 |

This model is in a class of its own.

The eye-catching design fascinates with the motion of the numbers at the top of the hour, as the numbers rotate to reveal crystals and angels.

The swinging pendulum on this model keeps this clock in a state of serene motion. Clock rotates through one of 16 melodies that will have you desiring an "encore".

Clock is battery quartz operated.



Dimensions



Back



Buttons



Features



Lifestyle

Joyful Encore

4MH847WD06

| Melody | Group | Order |
|--------------------------------|-------|-------|
| Amazing Grace | 1 | 1 |
| In The Garden | 1 | 2 |
| Ave Maria | 1 | 3 |
| How Great Thou Art | 1 | 4 |
| Jesus Loves Me | 1 | 5 |
| What A Friend We Have In Jesus | 1 | 6 |
| Traumerei | 2 | 1 |
| Sonata fur Klavier K. 545-1 | 2 | 2 |
| Aufforderung zum Tanz | 2 | 3 |
| Liebestraum No. 3 | 2 | 4 |
| Danza Dell'ore | 2 | 5 |
| Voice Of Spring | 2 | 6 |
| The First Noel | 3 | 1 |
| Jingle Bells | 3 | 2 |
| Silent Night | 3 | 3 |
| Deck The Halls | 3 | 4 |
| Joy To The World | 3 | 5 |
| We Wish You A Merry Christmas | 3 | 6 |