

**(A) Set The Time And Melody**


1. Remove the battery cover.
2. Before inserting the batteries, make sure to set the time at around 5:50(A.M.) by turning the hand-setting knob on the movement.
3. Insert the batteries according to (+) and (-) marking in the battery compartment. (When the batteries are inserted, melody function is automatically set for 5:00 A.M. regardless of the time indicated on your clock.)
4. To set the time and melody, please make sure to turn the hand CLOCKWISE. If present time is P.M., make sure hour hand passes through 12 o'clock until the desired time is shown. During setting time, you keep hearing sounds, but keep continuing until the desired time is shown. Once the desired time is set, melody starts sounding correctly.

\* The 4x4 mode will not work correctly during the first hour after time is set. However, after that, it works perfectly. This is normal condition for this movement.

5. To hang the clock (wall clock)  
Hang the clock vertically on the wall by using a strong hook or screw. It is important for the hook or screw to be installed firmly in the wall to avoid the clock from dropping.



**(B) Melody Function**

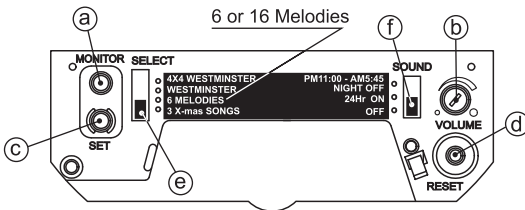

a) MONITOR

To demonstrate the hourly sound, select the melody by e) button and press the "MONITOR" button.

b) VOLUME: Rotary volume

**<IMPORTANT>**

c) SET: / d) RESET:

These are for technical use and please never touch after you insert the batteries.

e) SELECT: Melody select

- 4X4 WESTMINSTER: Westminster + Striking at 00 min; 1/4, 2/4, 3/4 Westminster at 15,30 and 45 min respectively.
  - WESTMINSTER: Westminster + Striking at 00 min.
  - 6(16) MELODIES: Plays melody every hours (no counting)
  - 3 X-mas SONGS: Plays Christmas song every hours (no counting)
- f) SOUND: Sound ON/OFF select
- NIGHT OFF: Night shut off mode. Sound turn-off from 11:00 p.m. to 5:45 a.m. automatically.
  - 24 Hr ON: 24 hours, sound turn-on.
  - OFF: Sound off mode.

**Care:**

1. Please do not place the clock in the following places:
  - a) in extreme hard temperature or humidity.
  - b) nearby strong vibration.
  - c) in the dusty place.
2. Please do not dismantle the clock movement.
3. Please do not clean the clock case by using paint thinner or other chemical materials. Neuter soap or cleanser as cleaning liquid is recommendable.
4. Please change exhausted batteries immediately to avoid leakage & damage to the product. For models with "ALKALINE" marking in the battery compartment, alkaline batteries are preferred. Batteries included in the box are manganese batteries and the battery life is approximately 50% shorter than that of alkaline battery.
5. In case the chime or melody stops or distorts, take out the battery and reset the clock again.