

QUARTZ CLOCK INSTRUCTIONS

1. Remove the battery cover and insert the battery according to (+) and (-) marking in the battery compartment.
2. **TO SET THE TIME**
Turn the hand setting knob to the correct time.
3. **TO SET THE ALARM**
Turn the alarm setting knob to the desired time and push (slide) up the alarm switch to ON position. To stop the alarm, push (slide) down the alarm switch to OFF position.
4. **SOUND SELECTION** (on models with sound selection)
To select the alarm sound, slide/turn the sound select switch each position at your choice.
5. **ALARM VOLUME** (on models with volume adjusting function)
Turn/slide the volume switch to "MAX" or "MIN" position at your choice.
6. **SNOOZE FEATURE** (on models with snooze function)
To activate SNOOZE feature, push SNOOZE button to silence alarm sound. Alarm will sound again approximately 5 minutes later. Snoozing time is 5 minutes every snoozing. This cycle can be repeated from about twenty to forty minutes. To stop SNOOZE cycle, slide the alarm button to OFF position.
7. **LIGHT** (on models with light)
The dial is lighted up by pushing the light button or the snooze /light button.

CARE

1. Please do not place the clock in the following places:
 - a) in extreme high temperature or humidity.
 - b) Near any strong vibration.
 - c) In a dusty place.
2. Please do not touch the clock movement.
3. Please do not clean the clock case by using paint thinner or other chemical materials. Neutral soap or cleanser as cleaning liquid is recommendable.
4. **Please change exhausted batteries immediately to avoid leakage & damage to the product. For models with "ALKALINE" marking in the battery compartment, alkaline batteries are preferred. Batteries included in the box are manganese batteries and the battery life is approximately 50% shorter than that of alkaline battery.**