


INSTRUCTIONS FOR MELODY AND VOLUME CONTROL

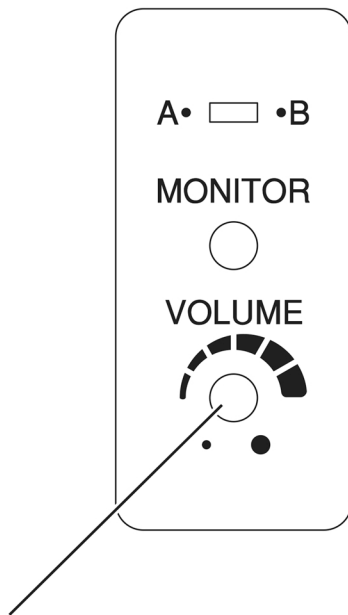

There is no dedicated ON/OFF switch. Use the volume control to turn ON/OFF the melodies. To silence the melodies completely, adjust the volume control knob to the leftmost position.

If you do not hear any melodies, simply adjust the volume to the rightmost position.